



GF2 System

Instructions to Nonstop continuous Setting

The GF2 system may operate in a continuous mode, (infinity time or nonstop) i.e. when in use on a nonstop conveyor paint line or in batch ovens with no solid target area for the thermal camera.

This mode will avoid setting up a given curing time, since the system will continue running until manual shut off. The Temperature still needs to be set or the system needs to run with 'No Probe'.






- 1) Ensure that the system is in STANDBY mode; after the 15 minutes preheat sequence is completed.



- 2) Push and hold the STANDBY/ADJUST button for 3-4 seconds till the screen blinks. Continue Holding.



- 3) Push and hold the CURE TIMER 'Up' button till it shows INF.

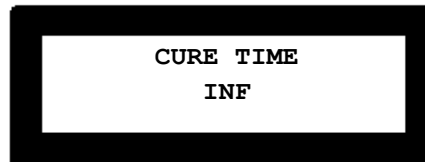

- 4) **NOTE:** Ensure to set a curing T° (temperature) or run in No Probe % setting.
- 5) Start the system by pushing on the START/RUN button.